
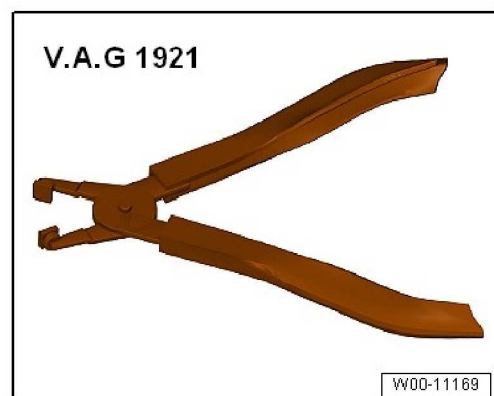


Removing and installing engine mountings

Special tools and workshop equipment required


- ♦ Support bracket -10 - 222 A-

- ♦ Hose clip pliers -V.A.G 1921-

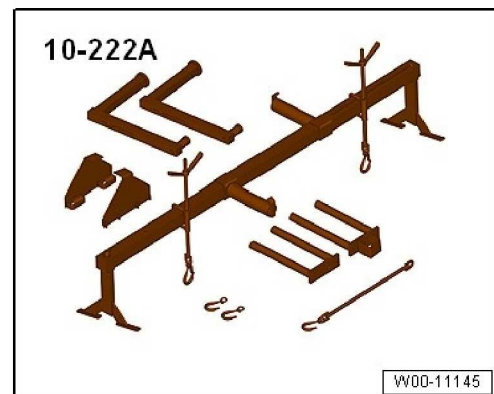


Removing

- Detach bonnet → Chapter „Detaching bonnet“.
- Detach activated charcoal filter solenoid valve 1 -N80--item 1- with bracket from air duct.
- Use hose clip pliers -V.A.G 1921- to release spring-type hose clips -arrows- and detach air duct -2-.

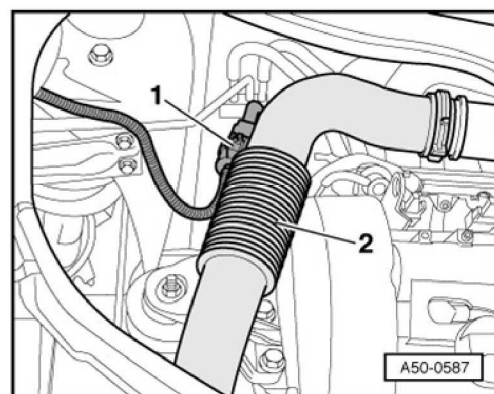

- Set up support bracket -10 - 222 A- on bolted flanges of wing panels.
- The spindle is located at rear.
- Attach hook of spindle -10 - 222 A /11- to engine lifting eye (right-side).
- Take up weight of engine with the spindle, but do not lift.

 **Note**

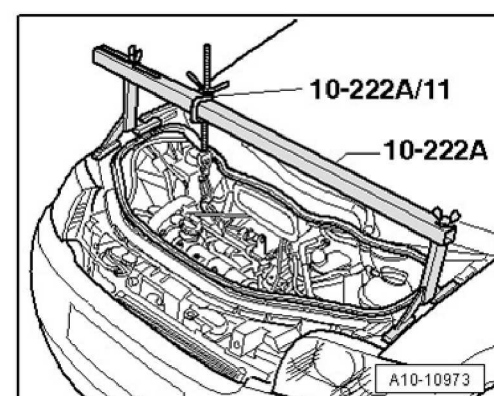

Do not loosen nut -3- unless renewing engine mounting.

- Remove bolts -1- and -2- and detach engine mounting with support arm.

Installing

- Tightening torque → Chapter „Exploded view - assembly mountings“

Install in reverse order.

