

Exploded view - coolant pump

1 - Coolant pump

- With integral seal
- Removing and installing → [Chapter „Removing and installing coolant pump“](#)

2 - Bolt

- Tightening torque → [Item](#)

3 - Cover (rear) for toothed belt

4 - Idler roller

- For main drive toothed belt

5 - Bolt

- Tightening torque → [Item](#)

6 - Bolts

- 20 Nm

